



Server Management




Solutions

Crystallink

CAT5 Serial Extender

ROSE.COM

Quick Start Guide

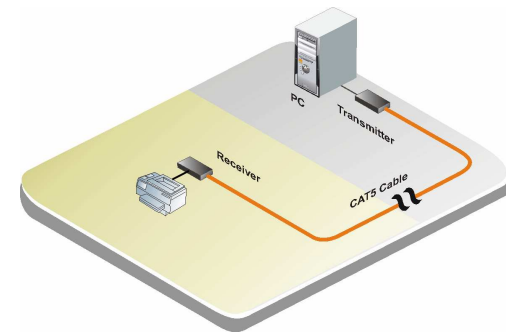

Phone: 800-333-9343 E-mail: sales@rose.com

10707 Stancliff Rd. Houston, TX 77099

Rose Electronics – Europe: +49 2454 969442 Rose Electronics – Asia: +65 6324 2322

10707 Stancliff Road
Houston, Texas 77099



Phone: (281) 933-7673
WWW.ROSE.COM

REMOTE UNIT



LOCAL UNIT



Perform the following steps to install the CrystalLink CAT5 Serial Extender

- 1- Connect the Local unit's DB9M port to the corresponding Com port on your PC using the provided DB9MF cable
- 2- Connect a compatible serial device to the Remote unit's DB9F port.
- 3- Connect the local unit to the remote unit with up to 1,000 feet (300 meters) of CAT5e cable.
- 4- Connect the power adapter to the local unit's +5VDC power jack and a power source

Features

- Extend the distance of any compatible serial device up to 1,000 feet (300 meters) from your PC over CAT5e cable.
- Remote unit obtains its power via CAT5e cable from the local unit.
- Supports Baud rates up to 115,200
- One CAT5e cable for serial data and power to the remote unit
- Conforms to RS-232c standards

Specifications

Connectors	Local RS-232 – DB9M Remote RS-232 – DB9F Link – RJ45F Power – From +5VDC power adapter
Max Baud rate	115,200 baud
Indicators	Power indicator on the remote unit
Cable Distance	1,000 feet (300 meter) Max.
Power Adapter	120V 60Hz / 5VDC 300mA
Power Consumption	5 Watts (max)
Shipping Weight	Local / Remote unit – 3.0 lbs / 1.36 Kg Remote unit – 2.32 oz / 66 g
Dimensions	Width Depth Height 1.4in / 3.56cm 3.75in / 9.53cm 1.0in / 2.54 cm